



Hybrid Inverter RS485 connect to EV Charger Direct

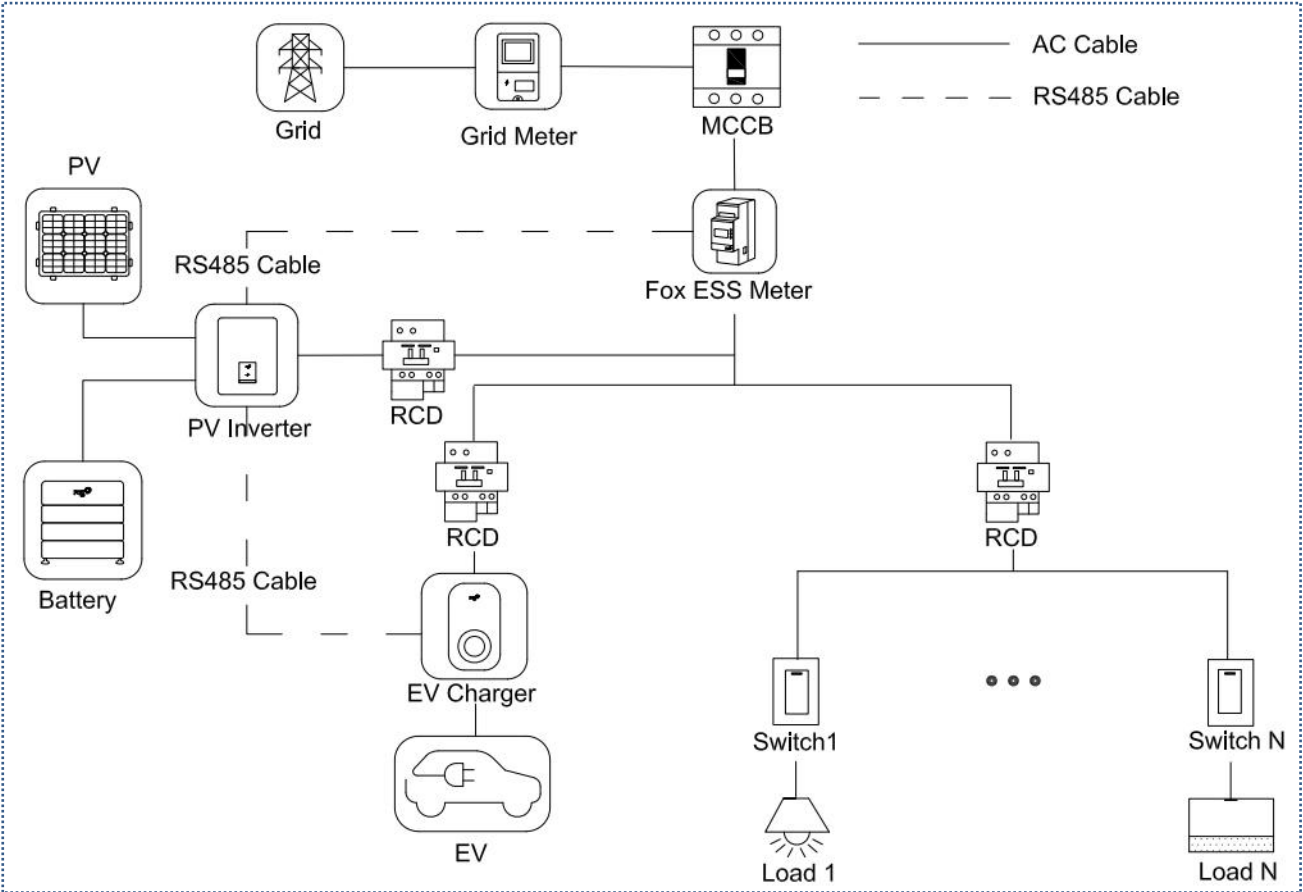

H1-G2 (KH/KA)


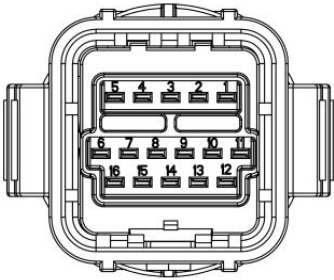


PIN	1	2	3	4	5	6	7	8
Definition	Meter485A	Meter485B	485B	485A	CT2+	CT2-	CT1-	CT1+

H1-G2 (KH/KA)
communication terminal


PIN1: Meter485A
PIN2: Meter485B

PIN3: EV Charger 485B
PIN4: EV Charger 485A

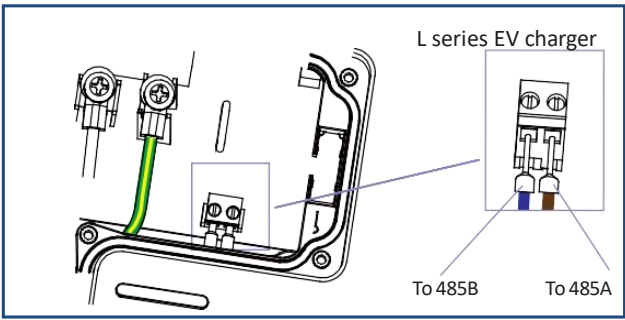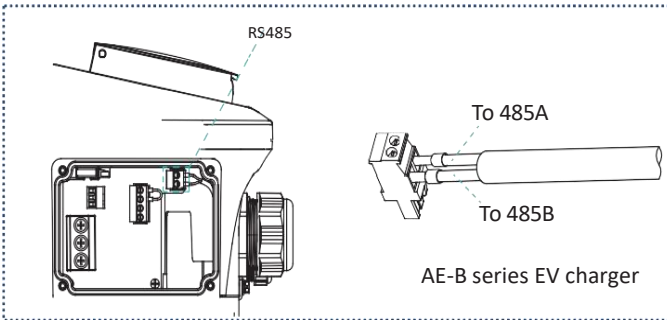

Hybrid Inverter RS485 connect to EV Charger Direct

P50/P100

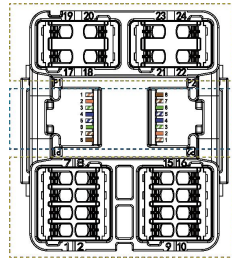

PIN	1	2	3	4	5	6
Definition	DRM1/5	DRM2/6	DRM3/7	DRM4/8	DRMO	RefGen
PIN	7	8	9	10	11	12
Definition	GND	Estop	Meter 485A	Meter 485B	485B	485A

P50/P100、A50/A100 communication terminal


PIN9: Meter 485A

PIN10: Meter 485B

PIN11: EV Charger 485B

PIN12: EV Charger 485A

H3

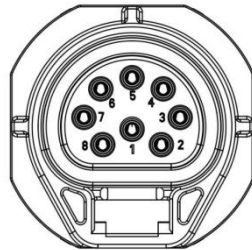

PIN	1	2	3	4	5	6	7	8
Definition	485A	485B	Meter 485B	Meter 485A	GND	GND	RY_CON	+12V

H3 communication terminal




PIN4: Meter 485A

PIN3: Meter 485B

PIN1: EV Charger 485A

PIN2: EV Charger 485B

H3-Pro

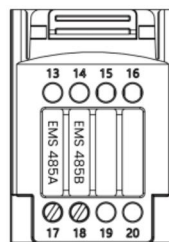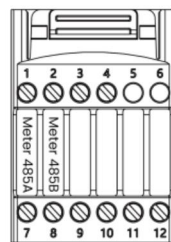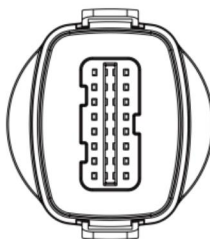

1	2	3	4	5	6	7	8
DRY RLY2-	DRY RLY2+	DRY RLY1-	DRY RLY1+	/	/	Meter 485A	Meter 485B
9	10	11	12	13	14	15	16
GND TVS	GND COM	+12V SELV	RY Ctrl	/	/	/	/
17	18	19	20				
EMS 485A	EMS 485B	/	/				



H3-Pro communication terminal

PIN7: Meter 485A


PIN8: Meter 485B

PIN17: EV Charger 485A

PIN18: EV Charger 485B

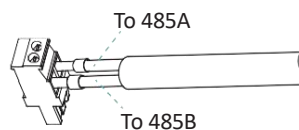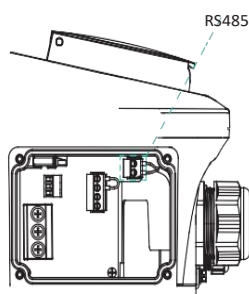

AE-B series EV charger

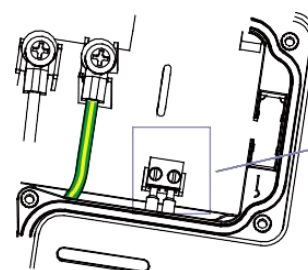


L series EV charger

To 485B


To 485A

Hybrid Inverter RS485 connect to EV Charger Direct

H3-Smart

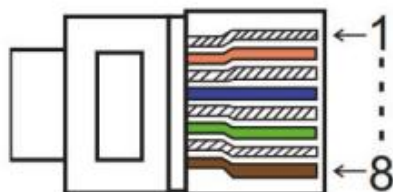

PIN	1	2	3	4	5	6	7	8
Definition	Meter 485B	Meter 485A	/	/	/	/	Meter 485B	Meter 485A

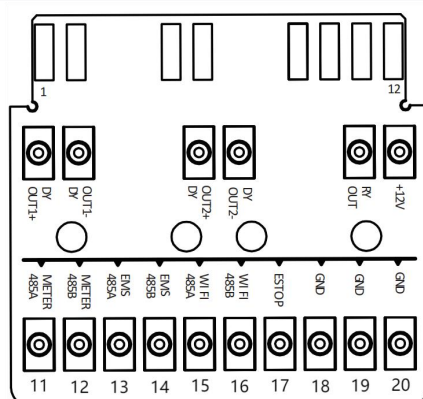

PIN	13	14
Definition	485A	485B



H3-Smart communication terminal

PIN1:Meter485B

PIN2:Meter485A

PIN13:EV Charger 485A

PIN14:EV Charger 485B

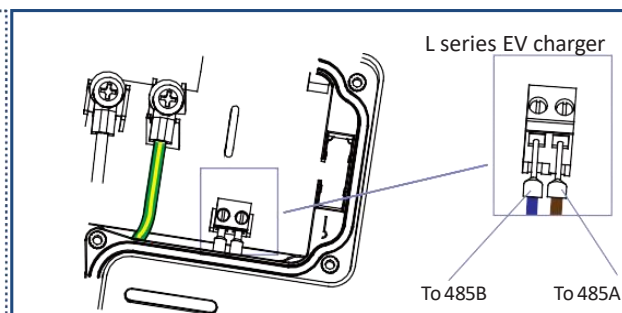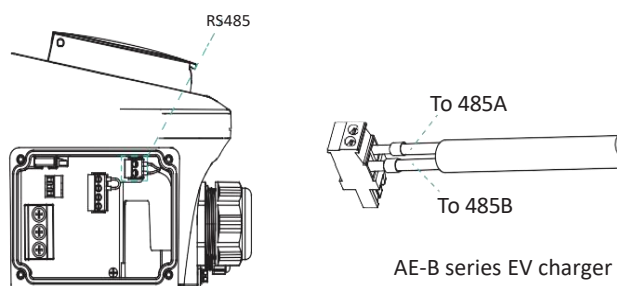

Series	Product Version	Single/Three Phase	Generation	Inverter integrate EVC Direct Via 485
A Lite 	Cable	Single Phase	L/Lmax	√
	Cable	Three phase	L/Lmax	√
A 	Cable/Socket	Single Phase	E-B	√
	Cable/Socket	Single Phase	E-A	√
	Cable/Socket	Single Phase	E-2	√
	Cable/Socket	Three phase	E-B	√
	Cable/Socket	Three phase	E-A	X
	Cable/Socket	Three phase	E-2	X